



1 : +5 V	(RED)	6 : $\overline{\text{RESET}}$	(GRN)
2 : -5 V	(WHT)	7 : Z	(BRN)
3 : GND	(BLK)	8 : ALM	(GRY)
4 : $\overline{\text{A}}$	(YEL)	9 : GND	(VIO)
5 : $\overline{\text{B}}$	(BLU)	10 : GND	(ORG)

SONY DG-B PROBE PINOUT